

8. Update

1. Firm ware Update

- ① When you on the MSHG-800, you can check the program version on the LCD screen.

MSHG-800(DFT)/(LINE)
HW:1.0 SW:150508

In case of update to MSHG-700, you have to change name to MSHG-700 all

- ② Please make new folder at USB stick as below, and save to firmware. (MSHG-800/FIRMWARE)



- ③ Connect to USB memory stick the MSHG-800's USB port. And turn on the MSHG-800.
- ④ Push the ENTER button while one second, it will be enter to File Control Mode.

[File Control Mode]
Firmware => M_Up Key
Timedata => M_Dn Key

- ⑤ Push the Model Up key, it will be enter to Firmware Download mode.

[Firmware Download]
=====

Select => Enter Key
Cancel => M-Up key

- ⑥ Push the Enter key two times to begin to firmware update.
 - ✓ If there are no USB memory stick or wrong firmware, it will be return to File Control Mode.

8. Update

- ⑥ Update will be progress around three minute.
- ⑦ After three minute, it will be showing on the LCD screen. Please turn off the MSHG-800.

[Firmware Download]
=====

Please Power turn Off and then ON !!!

- ⑧ Please turn on the MSHG-800 and check the program version.

2. Time Data(Pattern Data) Copy.

- ① Push the Enter button while one second, it will be enter to File Control Mode.

[File Control Mode]
Firmware => M_Up Key
Timedata => M_Dn Key

- ② Push the Model Down button, it will be enter to Time Data Download.

[TimeData Download]
=====

USB->800 : P_Up Key
800->USB : P_Dn Key

- ✓ USB->800 : Push the Pattern Up button for update Time Data(Pattern Data) from USB to MSHG-800.
- ✓ 800->USB : Push the Pattern Dn button for back up Time Data(Pattern Data) from MSHG-800 to USB memory stick.

8. Update


- ③ Update from USB memory stick's Time Data(Pattern Data) to MSHG-800
- Please un-zip and copy to USB memory stick. Copy to root folder and folder name is "MSHG-800-DATA"




- Connect USB memory stick to back panel's USB port of MSHG-800 and turn on the MSHG-800.
- Push the Enter button while one second, it will be enter to File Control Mode.
- Push the Model Dn button, it will be enter to Time Data Download mode.
- Push the Pattern Up button for begin Data update.
- Image will be downloading.
- If download finished, MSHG-800 will be showing "Please Power Turn Off and then ON !!" at the LCD screen, please turn off and on MSHG-800 to finish data update.

5. LINE Mode ← → DFT Mode setting

- LINE Mode: CEC Line on, but do not checking to CEC Ping ACK
 - LINE Mode(CEC Ping Check Off)
 - Front panel's Power Switch On.

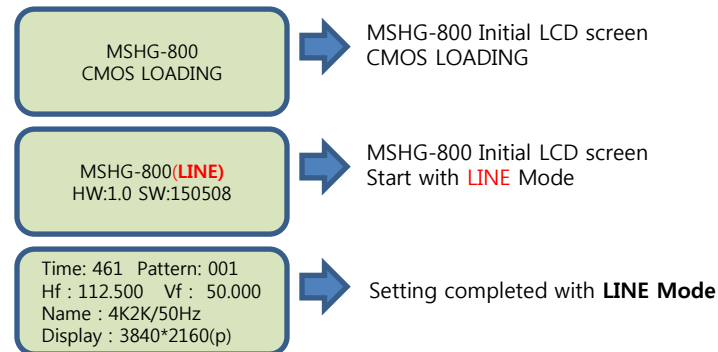

- DFT Mode: CEC Line on, checking to CEC Ping ACK. If CEC ping ACK fail, then MSHG-800's output will be stop(No Signal)
 - Front panel's Power Switch On.

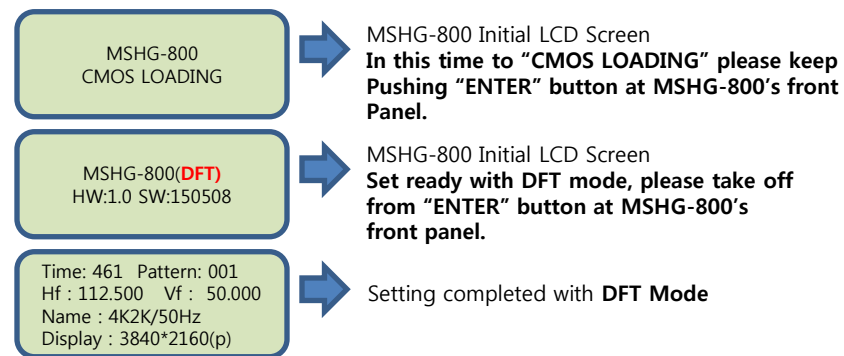

- When you set up the DFT Mode or LINE Mode, it will be maintained, even if you turn on and off the MSHG-800. If you want to change Line mode or DFT mode, you can set up as above.